 
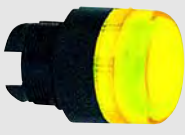 


	Flush	○ White	GB2-EA1
		● Black	GB2-EA2
		● Green	GB2-EA3
		● Red	GB2-EA4
		● Yellow	GB2-EA5
		● Blue	GB2-EA6
	Sign even button	○ Green I	GB2-EA331
		● Green II	GB2-EA336
		● White →	GB2-EA334
		● Black ↓	GB2-EA335
	Sign	● Red ○	GB2-EA432
		● Red stop	GB2-EA434
	Head of indicator Smooth lens Attach diffusion function	○ White	GB2-EV01
		● Green	GB2-EV03
		● Red	GB2-EV04
		● Yellow	GB2-EV05
		● Blue	GB2-EV06
	Button with lamp Smooth convex type	● Green	GB2-EW13
		● Red	GB2-EW14
		● Yellow	GB2-EW15
	Even button preventing from pollution	● Green	GB2-EW33
		● Red	GB2-EW34
		● Yellow	GB2-EW35
	Selector switch 2-positions 3-positions Return to centre	● Black	GB2-ED2
		● Black	GB2-ED3
		● Black	GB2-ED4
		● Black	GB2-ED5
		● Black	GB2-EJ2
	Selector switch 2-positions 3-positions Return to centre	● Black	GB2-EJ3
		● Black	GB2-EJ4
		● Black	GB2-EJ5
	Flush	● Black	GB2-EL2
		● Green	GB2-EL3
		● Red	GB2-EL4
		● Yellow	GB2-EL5
		● Blue	GB2-EL6
	Key switch 3-position Return to centre		GB2-EG2
			GB2-EG3
			GB2-EG4
			GB2-EG5
	Mushroom Head Pushbutton	● Black φ 30	GB2-EC24
		● Green φ 30	GB2-EC34
		● Red φ 30	GB2-EC44
		● Black φ 40	GB2-EC2
		● Green φ 40	GB2-EC3
	Push-locked Mushroom Pushbutton	● Red φ 30	GB2-ES44
		● Red φ 40	GB2-ES54
	Double-head button Even button+convex button	■ Green I	
		■ Red O	GB2-EL84
		■ I	
		□ White ■ O	GB2-EL94
	Double-head with lamp button Two even buttons	■ Green	
		■ Red	GB2-EW83
		■ Green	
		■ Red	GB2-EW84

Operator Interface Components

Accessories of push button, selector switch, pilot light


1

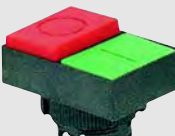

Description	Model
○ White	GB2-BA1
● Black	GB2-BA2
● Green	GB2-BA3
● Red	GB2-BA4
● Yellow	GB2-BA5
● Blue	GB2-BA6



Sign even button	○ Green I	GB2-BA331
	● Green II	GB2-BA336
	● White →	GB2-BA334
	● Black ↓	GB2-BA335
Sign	● Red ○	GB2-BA432
	● Red stop	GB2-BA434

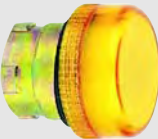 

Head of indicator Smooth lens Attach diffusion function	○ White	GB2-BV01
	● Green	GB2-BV03
	● Red	GB2-BV04
	● Yellow	GB2-BV05
	● Blue	GB2-BV06



Button with lamp Smooth convex type	● Green	GB2-BW13
	● Red	GB2-BW14
	● Yellow	GB2-BW15
Even button preventing from pollution	● Green	GB2-BW33
	● Red	GB2-BW34
	● Yellow	GB2-BW35
	● Blue	



Selector switch 2-positions 3-positions Return to centre	● Black	GB2-BD2
	● Black	GB2-BD3
	● Black	GB2-BD4
	● Black	GB2-BD5



Selector switch 2-positions 3-positions Return to centre	● Black	GB2-BJ2
	● Black	GB2-BJ3
	● Black	GB2-BJ4
	● Black	GB2-BJ5



Description	Model
Flush	GB2-BG2
	GB2-BG3
	GB2-BG4
	GB2-BG5



Key Mushroom Pushbutton	● Red φ 40	GB2-BS14
-------------------------------	------------	----------



Mushroom Head Pushbutton	● Black φ 30	GB2-BC24
	● Green φ 30	GB2-BC34
	● Red φ 30	GB2-BC44
	● Black φ 40	GB2-BC2
	● Green φ 40	GB2-BC3
	● Red φ 40	GB2-BC4




Push-locked Mushroom Pushbutton	● Red φ 30	GB2-BS44
	● Red φ 40	GB2-BS54



Double-head button Even button+convex button	■ Green I	GB2-BL84
	■ Red ○	
	■ I	GB2-BL94
	□ White ■ O	



Double-head with lamp button Two even buttons	■ Green	GB2-BW83
	■ Red	
	■ Green	GB2-BW84
	■ Red	

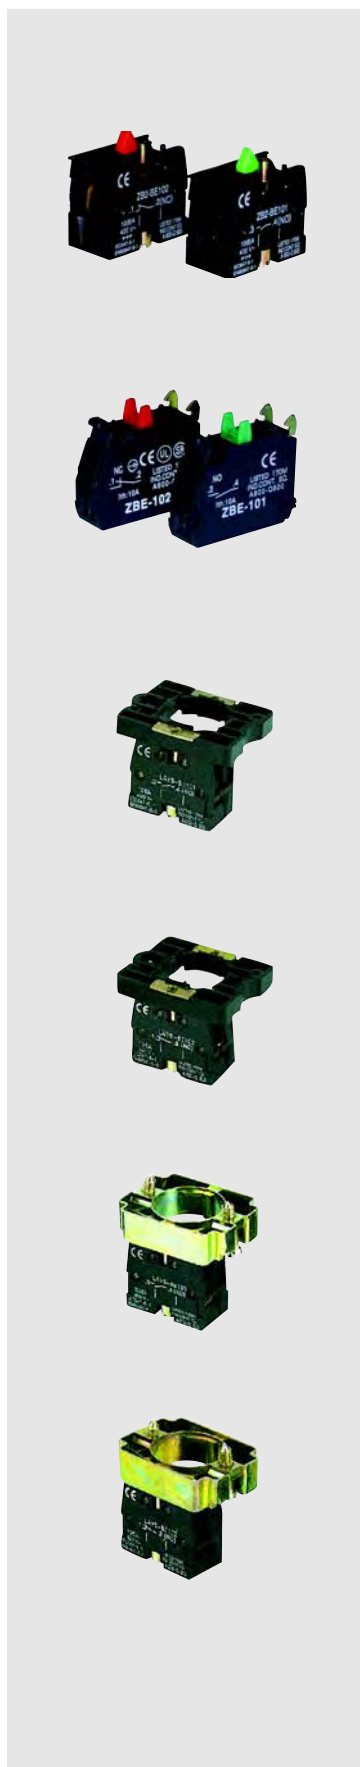 

Description	Contact		Colour	Model	Dimension
	N/O	N/C			
For making up body assemblies with 3, 4, 5 or maximum of 6 contact blocks or replacing 1 st or and contact	1		Green	GB2-BE101	
				ZBE101	
		1	Red	GB2-BE102	
				ZBE102	
For making up body assemblies with 3, 4, 5 or maximum of 6 contact blocks or replacing 1 st or 2nd contact	1		Green	GB2-EZ101	
	2		Green	GB2-EZ103	
	1	1	Green, Red	GB2-EZ105	
		1	Red	GB2-EZ102	
		2	Red	GB2-EZ104	
For making up body assemblies with 3, 4, 5 or maximum of 6 contact blocks or replacing 1 st or 2nd contact	1		Green	GB2-BZ101	
	2		Green	GB2-BZ103	
	1	1	Green, Red	GB2-BZ105	
		1	Red	GB2-BZ102	
		2	Red	GB2-BZ104	

1



Description

Model

Bottom seat
of button
with lamp
Direct Type

GB2-EB063

GB2-EB064

GB2-EB065



Bottom seat
of button
with lamp
Direct Type

GB2-EW061

GB2-EW062

GB2-EW063

GB2-EW064

GB2-EW065



Bottom with
lamp install
base BA 9s
Resistance
≤ 250V

GB2-EW071

GB2-EW072

GB2-EW073

GB2-EW074

GB2-EW075



Bottom with
lamp install
base BA 9s
Resistance
≤ 250V

GB2-EV4

GB2-EW041

GB2-EW042

GB2-EW043

GB2-EW044

GB2-EW045



Bottom with
lamp install
base BA 9s
Resistance
≤ 380V

GB2-EW051

GB2-EW052

GB2-EW053

GB2-EW054

GB2-EW055



Description

Model

Bottom seat
of button
with lamp
Direct Type

GB2-BV063

GB2-BV064

GB2-BV065



Bottom seat
of button
with lamp
Direct Type

GB2-BW061

GB2-BW062

GB2-BW063

GB2-BW064

GB2-BW065



Bottom with
lamp install
base BA 9s
Resistance
≤ 250V

GB2-BW071

GB2-BW072

GB2-BW073

GB2-BW074

GB2-BW075



Bottom with
lamp install
base BA 9s
Resistance
≤ 130V

GB2-BV4

GB2-BW041

GB2-BW042

GB2-BW043

GB2-BW044

GB2-BW045



Bottom with
lamp install
base BA 9s
Resistance
≤ 250V

GB2-BW051

GB2-BW052

GB2-BW053

GB2-BW054

GB2-BW055